



1994-1997 Honda Accord Oil and Oil Filter Replacement

A video tutorial on how to change the oil and oil filter on a 1994-1996 Honda Accord.

Written By: eCuration



INTRODUCTION

The oil and oil filter should be replaced every 5,000 miles.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.

Safety

If this is your first time working on a vehicle read our [safety tips](#) before proceeding.



TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [Wheel Chocks](#) (1)
- [Long Neck Funnel](#) (1)
- [Oil Drain Pan](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [17 mm Socket](#) (1)
- [Oil Filter Wrench](#) (1)
- [Paper Towels](#) (1)



PARTS:

- [5W-30 Motor Oil](#) (5)
- [Oil Filter](#) (1)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-06 04:04:11 PM.